


700-01-00-001, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), before 05/2001

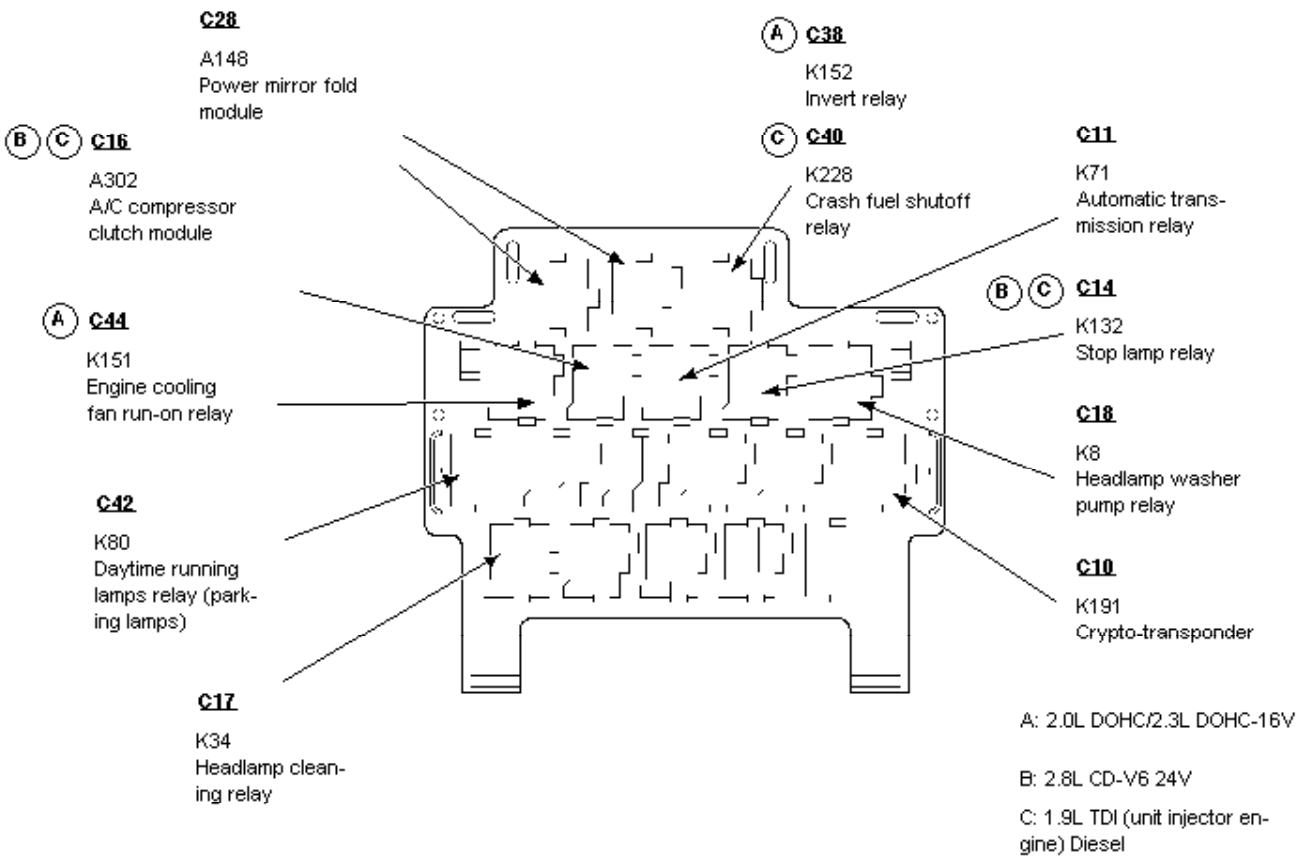


700-01-00-002, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), before 05/2001

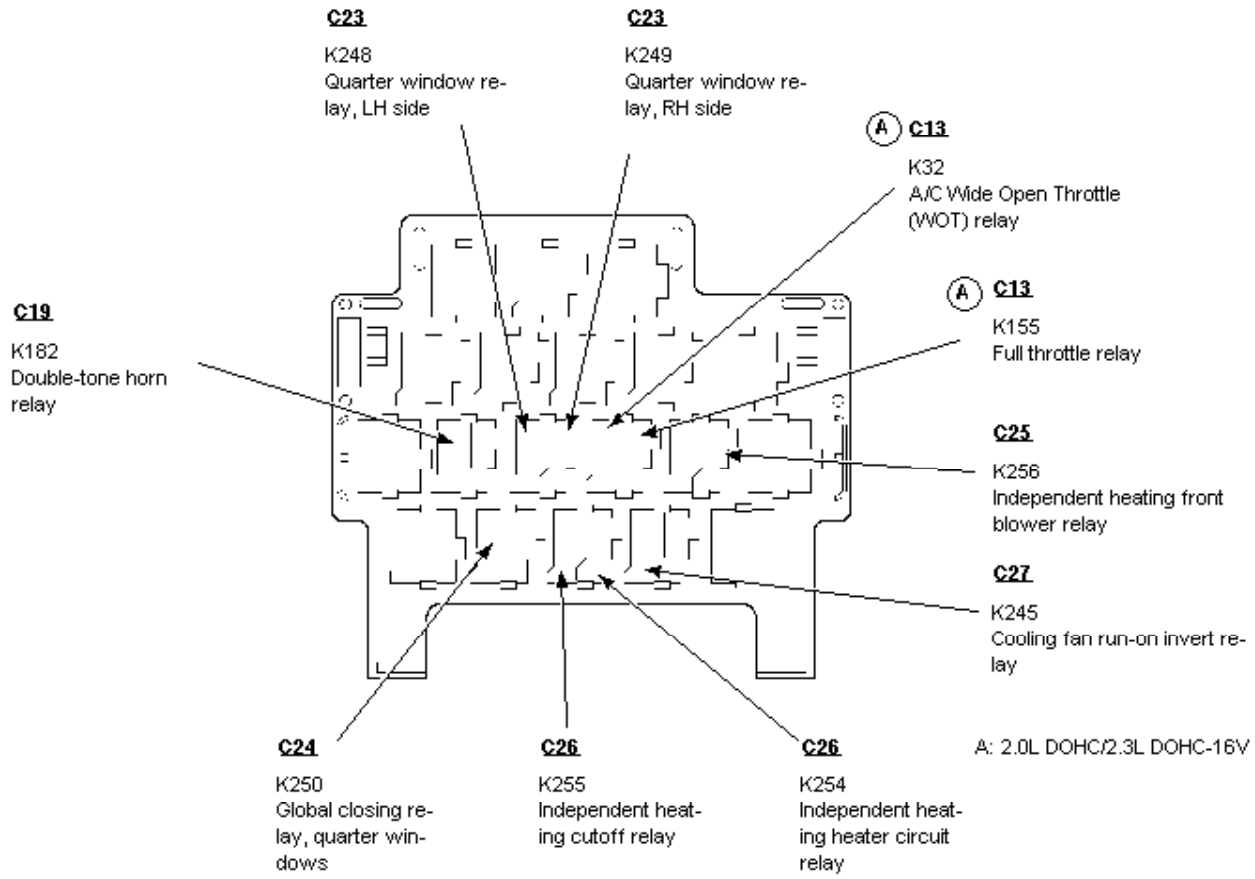


700-01-00-003, Fuse and Relay Information, Bottom relay panel of Central Junction Box (CJB), RHD shown, LHD similar, before 05/2001

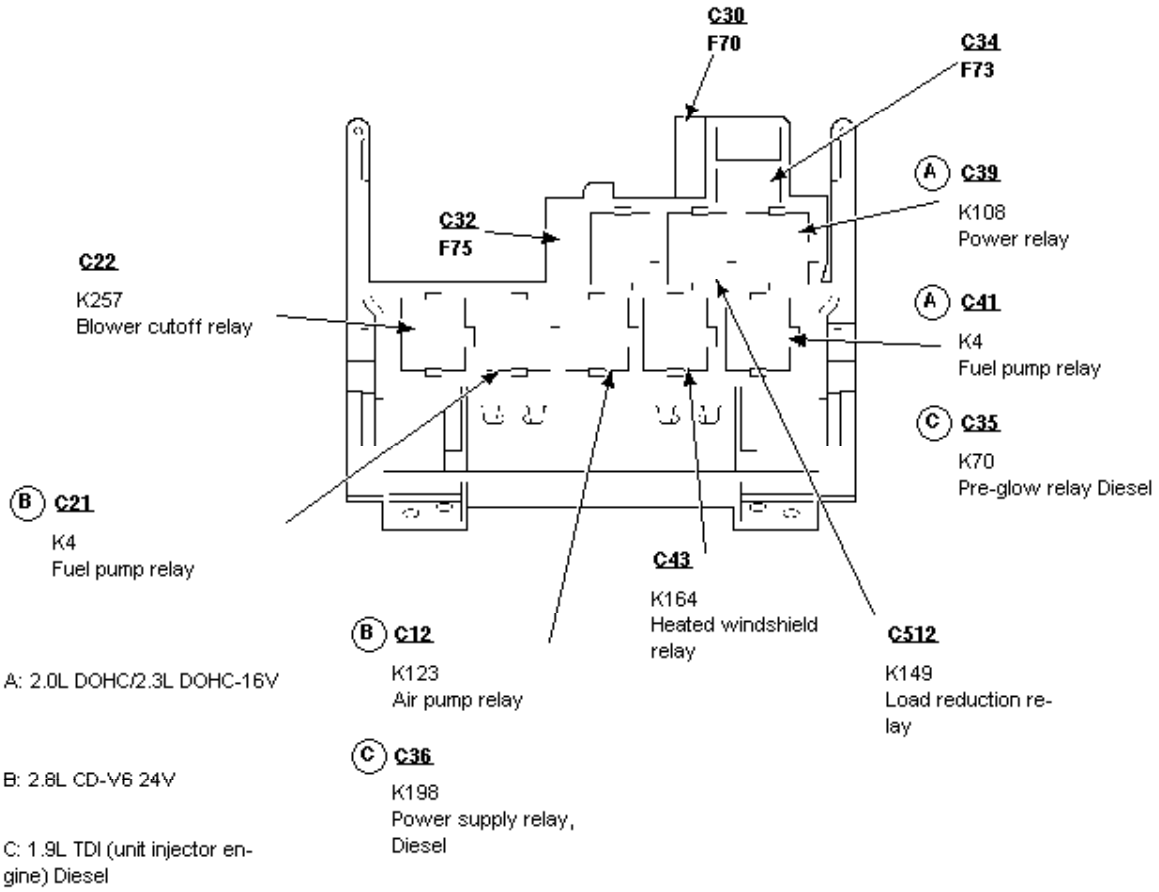


700-01-00-004, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), from 05/2001 to 11/2001

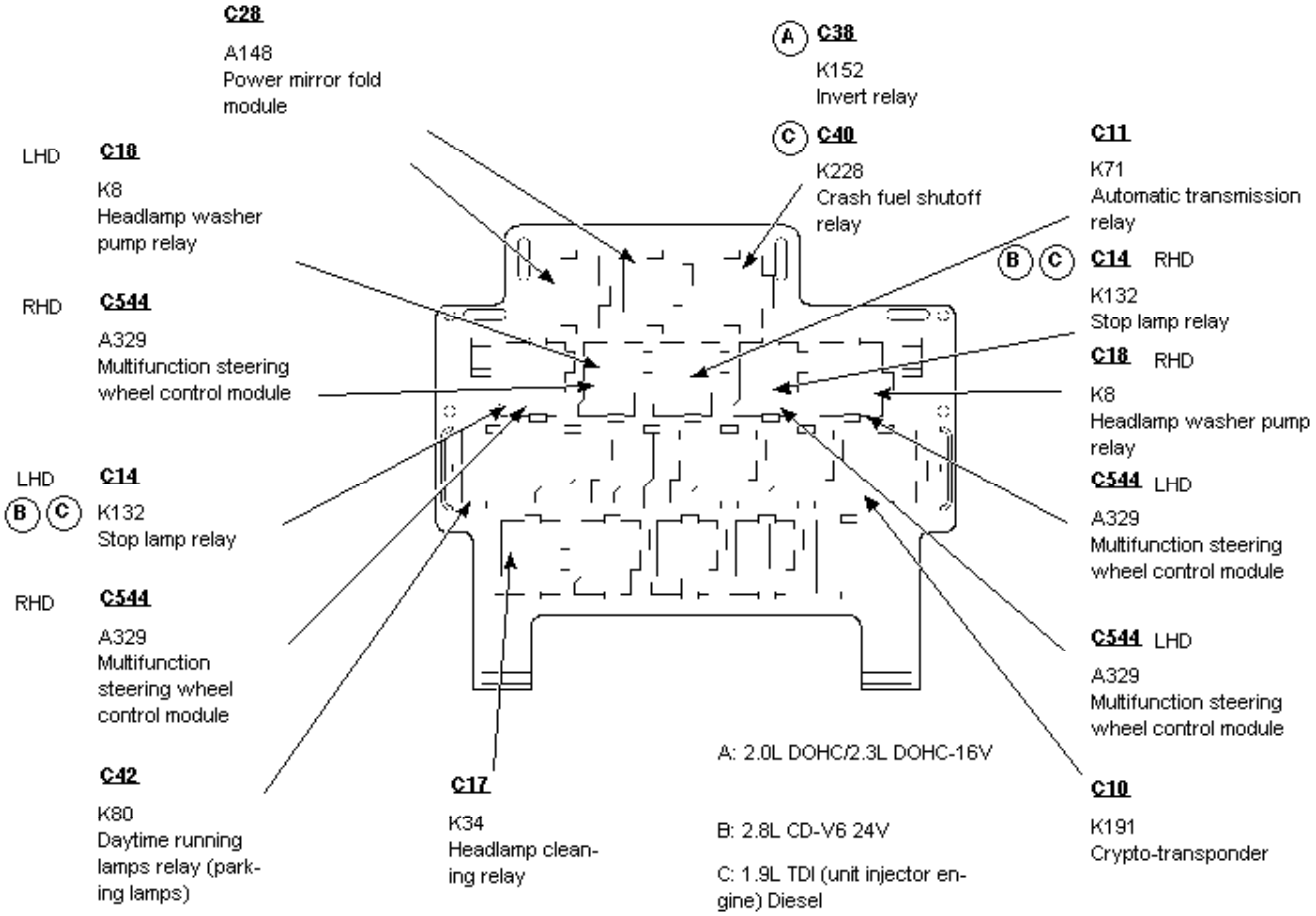


700-01-00-005, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), from 05/2001 to 11/2001

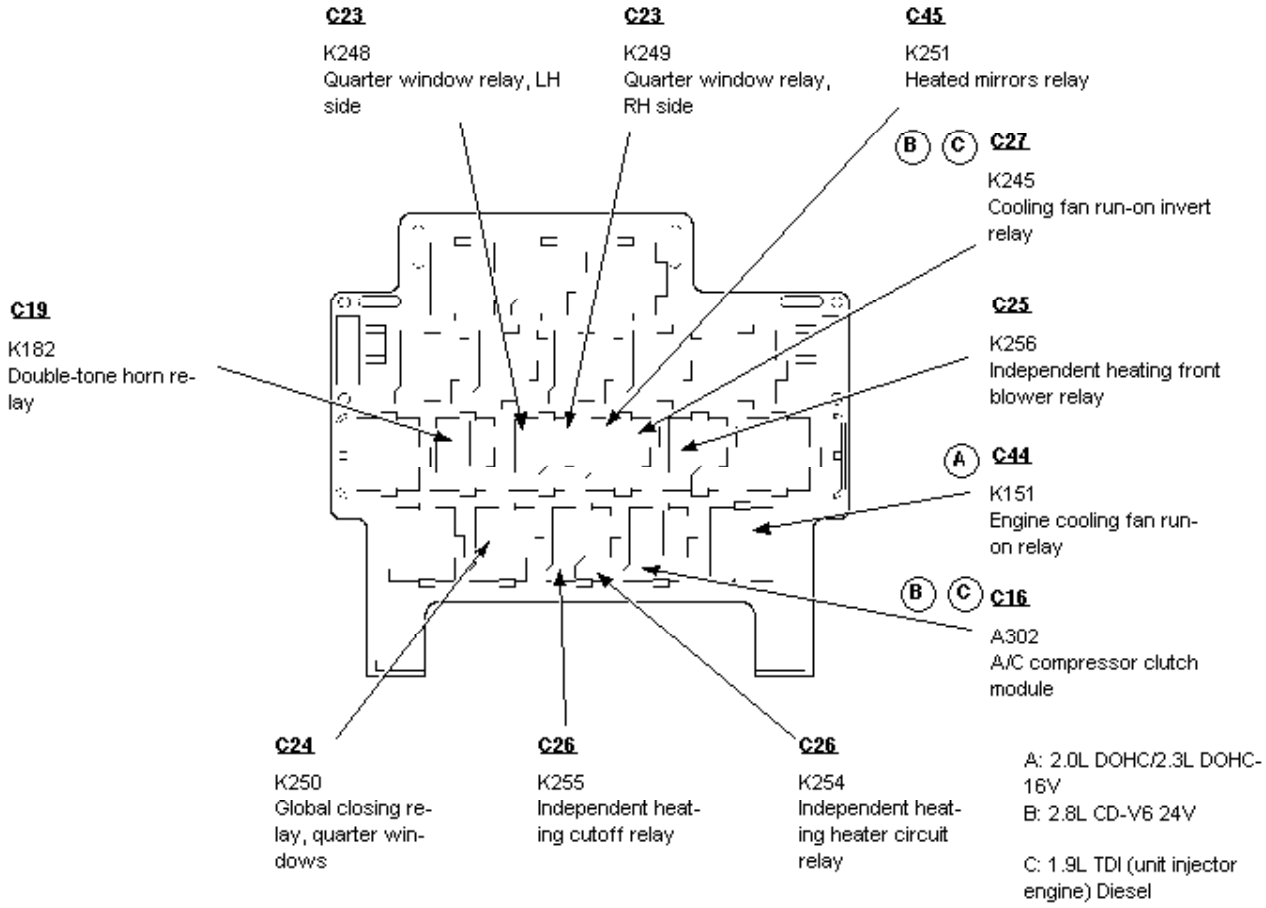


700-01-00-006, Fuse and Relay Information, Bottom relay panel of Central Junction Box (CJB), RHD shown, LHD similar, from 05/2001 to 11/2001

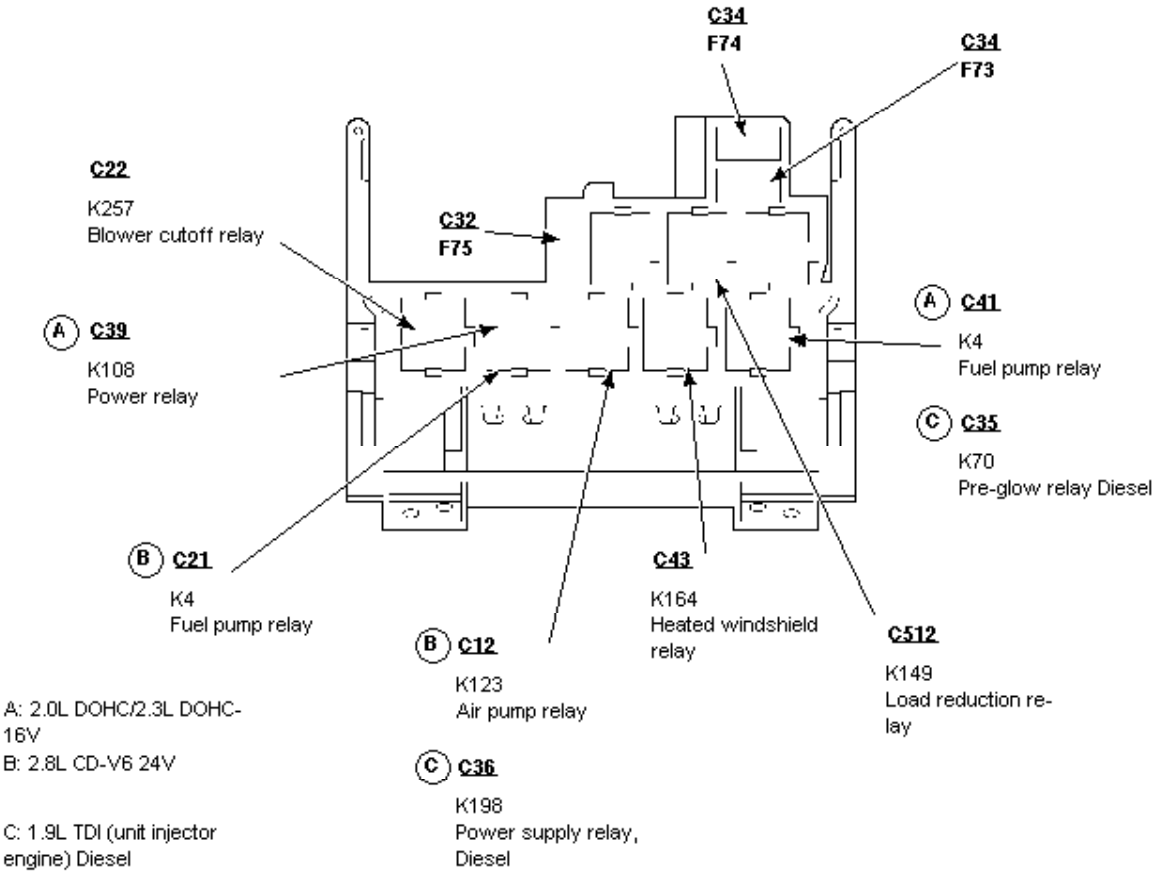


700-01-00-007, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), as of 11/2001

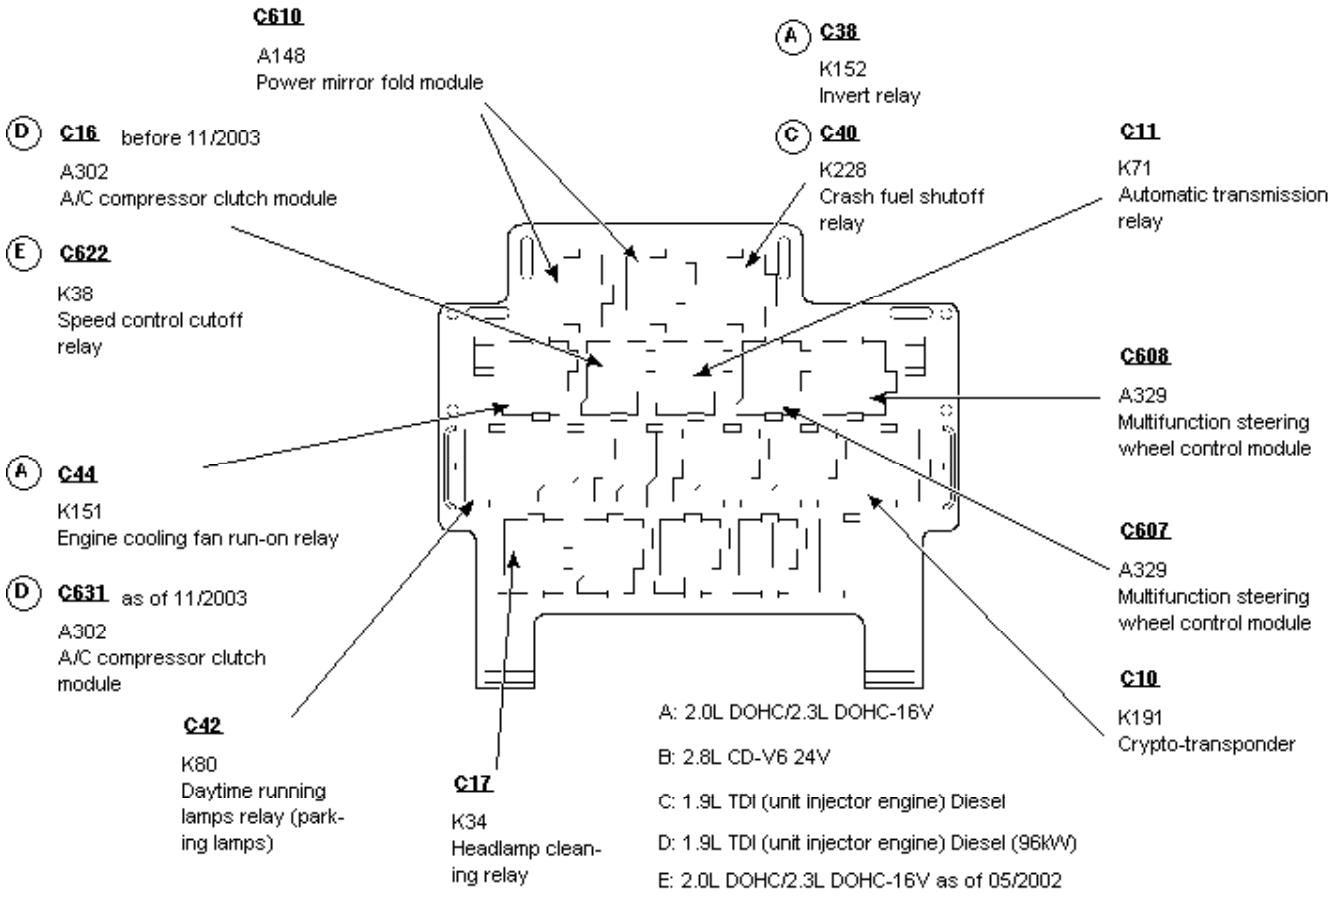


700-01-00-008, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), as of 11/2001

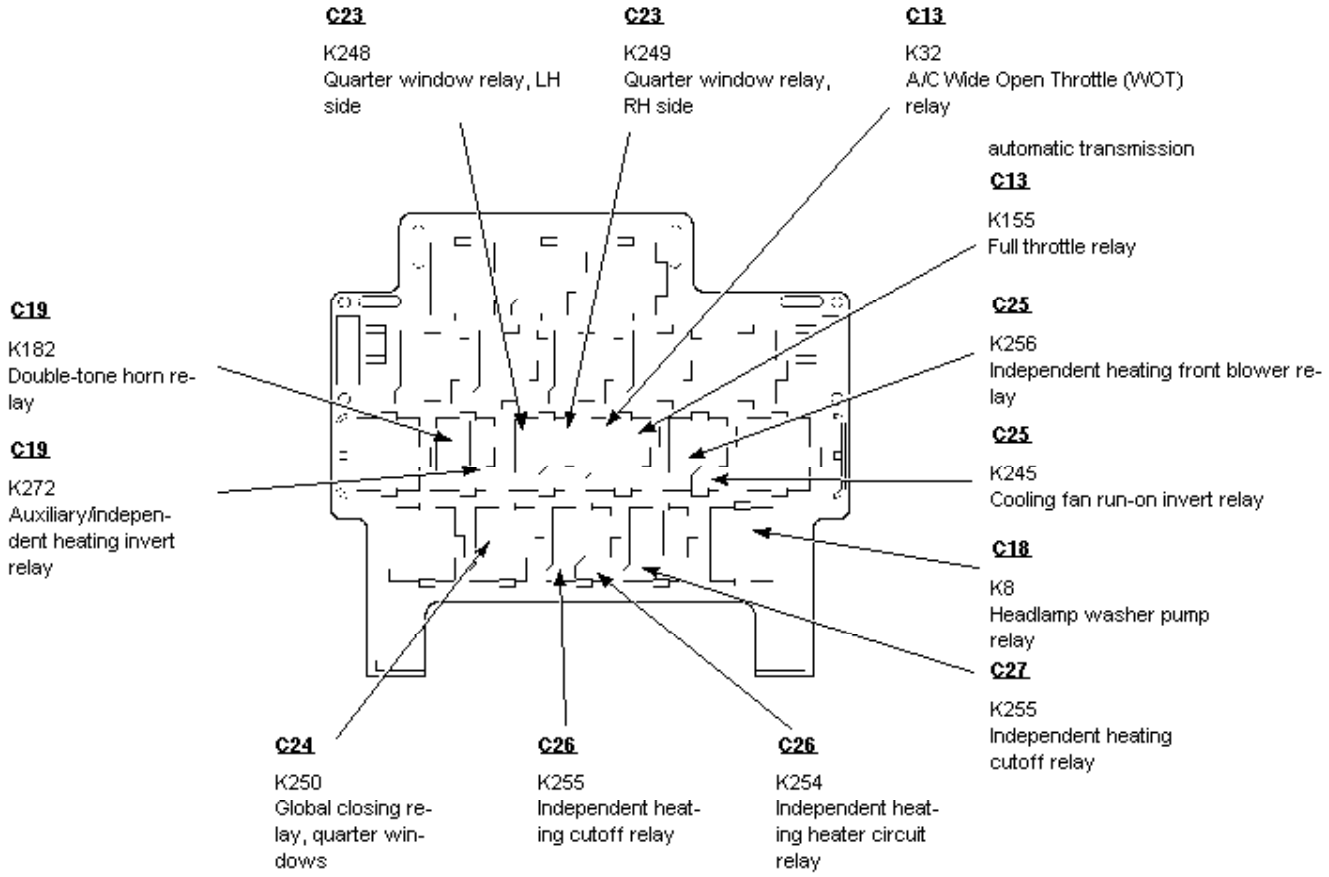


700-01-00-009, Fuse and Relay Information, Bottom relay panel of Central Junction Box (CJB), RHD shown, LHD similar, as of 11/2001

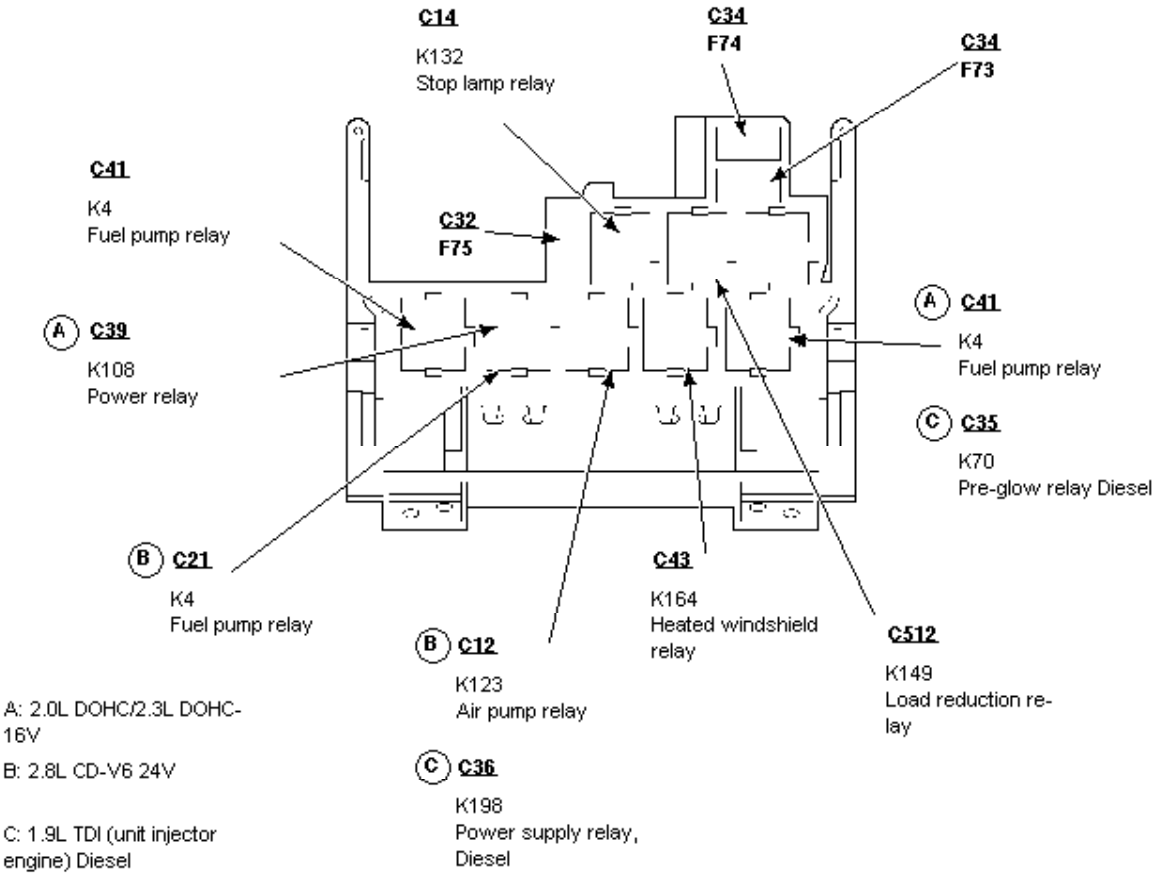


700-01-00-010, Fuse and Relay Information, under RH front seat

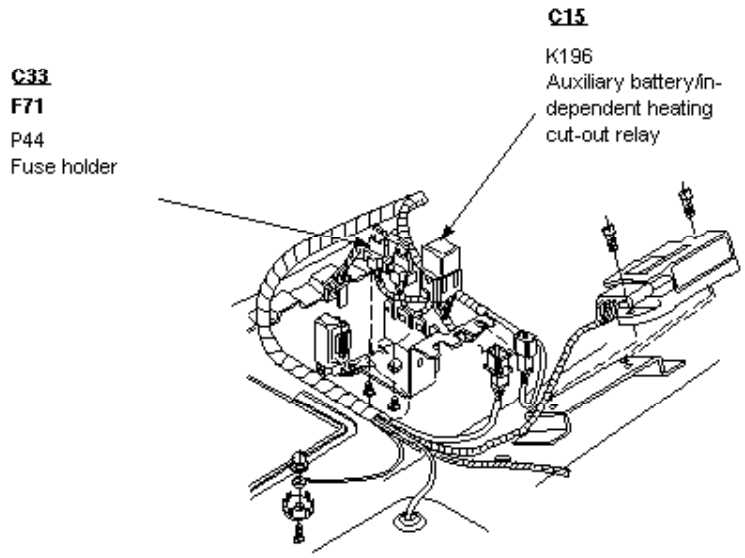

700-01-00-011, Fuse and Relay Information, Fuse panel below Central Junction Box (CJB)

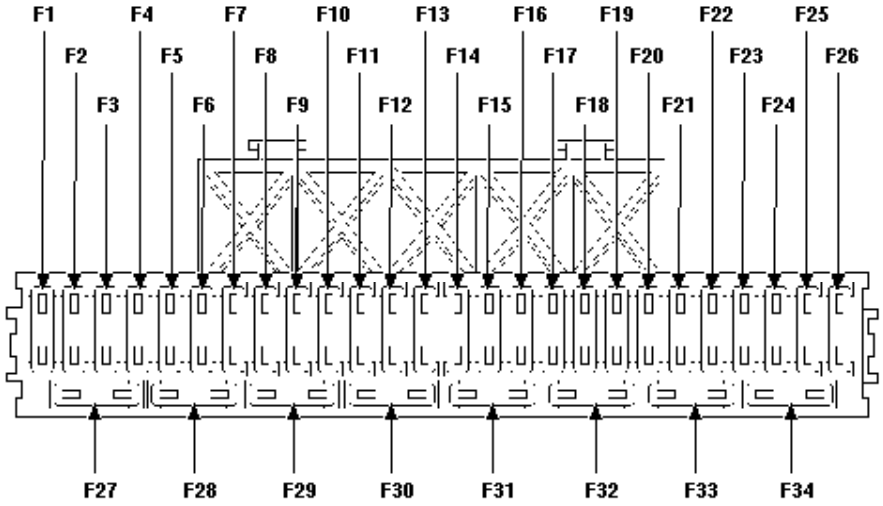

700-01-00-012, Fuse and Relay Information, Fuse panel of Central Junction Box (CJB)

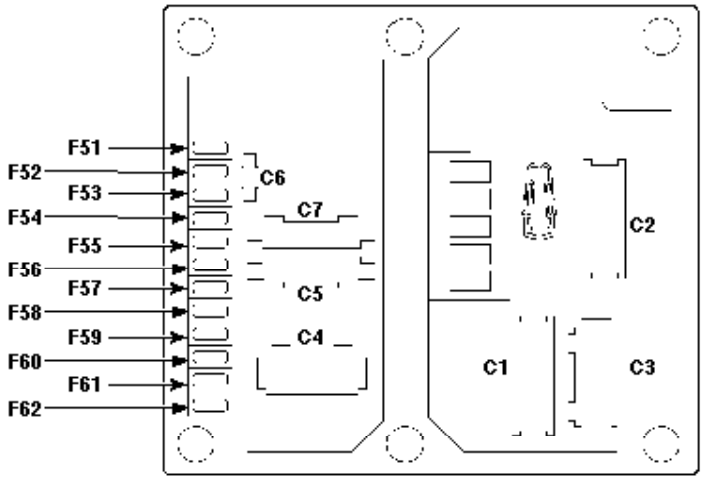

700-01-00-013, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number														
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		10A	10A	5A	10A	15A	*	25A	15A	5A 15A*	*	20A 25A*	25A	3A 10A*	20A 25A* 30A*	10A
206-09A-00	Anti-Lock Control			●												●
206-09B-00	Anti-Lock Control - Traction Control			●												●
206-09C-00	Anti-Lock Control - Traction Control and Stability Assist		●	●												●
303-03A-00	Engine Cooling - 2.0L DOHC														●	
303-03B-00	Engine Cooling - 2.3L DOHC-16V														●	
303-03C-00	Engine Cooling - 2.8L CD-V6 24V		●													
303-03D-00	Engine Cooling - 1.9L TDI (unit injector engine) Diesel		●	●												
303-04A-00	Fuel Charging and Controls - 2.0L DOHC														●	
303-04B-00	Fuel Charging and Controls - 2.3L DOHC-16V														●	
303-04C-00	Fuel Charging and Controls - 2.8L CD-V6 24V														●	
303-04D-00	Fuel Charging and Controls - 1.9L TDI (unit injector engine) Diesel													●	●	
303-06-00	Starting System															
303-07A-00	Engine Ignition	●														
303-07B-00	Glow Plug System															
303-14A-00	Electronic Engine Controls - 2.0L DOHC													●	●	
303-14B-00	Electronic Engine Controls - 2.3L DOHC-16V													●	●	
303-14C-00	Electronic Engine Controls - 2.8L CD-V6 24V	●			●									●	●	
303-14D-00	Electronic Engine Controls - 1.9L TDI (unit injector engine) Diesel	●			●									●	●	●
307-01-00	Automatic Transmission					●										●
308-03B-00	Manual Transmission					●										●
310-03-00	Vehicle Speed Control		●	●												●
412-02B-00	Auxiliary Heating			●						●			●			
412-03A-00	Air Conditioning		●	●											●	
413-00-00	Instrument Cluster and Panel Illumination															
413-01-00	Instrument Cluster	●														
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		10A	10A	5A	10A	15A	*	25A	15A	5A 15A*	*	20A 25A*	25A	3A 10A*	20A 25A* 30A*	10A

F6*: 10A: before 11/2001
25A: as of 11/2001

F9*: 15A: with heated seats

F10*: 15A: before 05/2002
10A: as of 05/2002

F11*: 25A: with trailer socket

F13*: 10A: 1.9L TDI (unit injector engine) Diesel

F14*: 30A: 2.8L CD-V6 24V
25A: 1.9L TDI (unit injector engine) Diesel

700-01-00-014, Fuse and Relay Information, Central Junction Box (CJB)

Fuse number																		
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
15A	10A	5A	5A	10A 15A*	25A	30A	10A	30A	30A	15A	25A	3A	*	20A	3A	5A	*	5A 10A*
																●		
		●																●
		●																●
●		●		●														
●		●		●									●					●
																		●
																		●
									●									●
																		●
									●									
													●					
																		●
																		●
																		●
									●									●
			●															●
	●								●									
																●		●
			●								●					●	●	
●		●	●	●	●	●							●			●	●	●
												●						
											●				●	●		●
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
15A	10A	5A	5A	10A 15A*	25A	30A	10A	30A	30A	15A	25A	3A	*	20A	3A	5A	*	5A 10A*

	Group
	206-09A-00
	206-09B-00
	206-09C-00
	303-03A-00
	303-03B-00
	303-03C-00
	303-03D-00
	303-04A-00
	303-04B-00
	303-04C-00
	303-04D-00
	303-06-00
	303-07A-00
	303-07B-00
	303-14A-00
	303-14B-00
	303-14C-00
	303-14D-00
	307-01-00
	308-03B-00
	310-03-00
	412-02B-00
	412-03A-00
	413-00-00
	413-01-00

F20*: 5A: as of 05/2001

F29*: 10A: 1.9L TDI (unit injector engine) Diesel (96MY)
20A: Other

F33*: 30A: before 11/2001
10A: as of 11/2001

F34*: 10A: 1.9L TDI (unit injector engine) Diesel

700-01-00-015, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number														
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		10A	10A	5A	10A	15A	*	25A	15A	5A 15A*	*	20A 25A*	25A	5A 10A*	20A 25A* 30A*	10A
413-06-00	Horn			●			●									
413-07-00	Clock															
413-09-00	Warning Devices															
413-13-00	Parking Aid		●			●										
414-02-00	Generator and Regulator							●								
415-01-00	Audio Unit		●													
415-03-00	Speakers															
415-07-00	Video System										●					
417-01-00	Exterior Lighting		●			●			●			●				●
417-02-00	Interior Lighting															
417-04-00	Daytime Running Lamps															
418-00-00	Module Communications Network															
419-01A-00	Anti-Theft - Active			●												
419-01B-00	Anti-Theft - Passive				●											
419-07-00	Navigation System			●		●										
419-08-00	Cellular Phone															
419-10-00	Multifunction Electronic Control Modules			●												
501-09-00	Rear View Mirrors		●	●		●										
501-10-00	Seating			●						●						
501-11-00	Glass, Frames and Mechanisms		●													
501-12-00	Instrument Panel and Console							●	●		●					
501-14-00	Handles, Locks, Latches and Entry Systems															
501-16-00	Wipers and Washers											●				
501-17-00	Roof Opening Panel			●												
501-20B-00	Occupant Restraints - Passive															
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		10A	10A	5A	10A	15A	*	25A	15A	5A 15A*	*	20A 25A*	25A	5A 10A*	20A 25A* 30A*	10A

F6*: 10A: before 11/2001
25A: as of 11/2001
F9*: 15A: with heated seats
F10* 15A: before 05/2002
10A: as of 05/2002
F11*: 25A: with trailer socket

F13*: 10A: 1.9L TDI (unit injector engine) Diesel
F14*: 30A: 2.8L CD-V6 24V
25A: 1.9L TDI (unit injector engine) Diesel

700-01-00-016, Fuse and Relay Information, Central Junction Box (CJB)

Fuse number																		
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
15A	10A	5A	5A	10A 15A*	25A	30A	10A	30A	30A	15A	25A	3A	*	20A	3A	5A	*	5A 10A*
												●				●		
											●				●	●		
			●														●	
														●	●	●		
														●	●	●		
			●							●		●						
			●															
																●		
									●		●				●	●		
																●		
														●	●	●		
															●	●		
											●				●			
			●				●				●					●		
											●					●		
				●				●			●					●	●	
											●							
											●							
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34
15A	10A	5A	5A	10A 15A*	25A	30A	10A	30A	30A	15A	25A	3A	*	20A	3A	5A	*	5A 10A*

	Group
	413-06-00
	413-07-00
	413-09-00
	413-13-00
	414-02-00
	415-01-00
	415-03-00
	415-07-00
	417-01-00
	417-02-00
	417-04-00
	418-00-00
	419-01A-00
	419-01B-00
	419-07-00
	419-08-00
	419-10-00
	501-09-00
	501-10-00
	501-11-00
	501-12-00
	501-14-00
	501-16-00
	501-17-00
	501-20B-00

F20*: 15A: as of 05/2001

F29*: 10A: 1.9L TDI (unit injector engine) Diesel (96kW)
20A: Other

F33*: 30A: before 11/2001
10A: as of 11/2001

F34*: 10A: 1.9L TDI (unit injector engine) Diesel

700-01-00-017, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number															
		51	52	53	54	55	56	57	58	59	60	61	62	70*	73	74*	75
		20A	20A	10A	10A	5A	5A	5A	10A	10A 15A*	10A 15A*	10A	10A	30A	50A	50A	30A
206-09A-00	Anti-Lock Control																
206-09B-00	Anti-Lock Control - Traction Control																
206-09C-00	Anti-Lock Control - Traction Control and Stability Assist																
303-03A-00	Engine Cooling - 2.0L DOHC																
303-03B-00	Engine Cooling - 2.3L DOHC-16V																
303-03C-00	Engine Cooling - 2.8L CD-V6 24V																
303-03D-00	Engine Cooling - 1.9L TDI (unit injector engine) Diesel																
303-04A-00	Fuel Charging and Controls - 2.0L DOHC																
303-04B-00	Fuel Charging and Controls - 2.3L DOHC-16V																
303-04C-00	Fuel Charging and Controls - 2.8L CD-V6 24V																
303-04D-00	Fuel Charging and Controls - 1.9L TDI (unit injector engine) Diesel																
303-06-00	Starting System																
303-07A-00	Engine Ignition																
303-07B-00	Glow Plug System																
303-14A-00	Electronic Engine Controls - 2.0L DOHC																
303-14B-00	Electronic Engine Controls - 2.3L DOHC-16V																
303-14C-00	Electronic Engine Controls - 2.8L CD-V6 24V													●		●	
303-14D-00	Electronic Engine Controls - 1.9L TDI (unit injector engine) Diesel																
307-01-00	Automatic Transmission																
308-03B-00	Manual Transmission																
310-03-00	Vehicle Speed Control																
412-02B-00	Auxiliary Heating																
412-03A-00	Air Conditioning																
413-00-00	Instrument Cluster and Panel Illumination																
413-01-00	Instrument Cluster											●					
		51	52	53	54	55	56	57	58	59	60	61	62	70*	73	74*	75
		20A	20A	10A	10A	5A	5A	5A	10A	10A 15A*	10A 15A*	10A	10A	30A	50A	50A	30A

F59*: 15A: as of 05/2001

F60*: 15A: as of 05/2001

F70*: before 05/2001

F74*: as of 05/2001

700-01-00-018, Fuse and Relay Information, Other fuses

Fuse number						Group
F71	F72	F76	F77			
*	30	50	300			
						206-09A-00
						206-09B-00
						206-09C-00
						303-03A-00
						303-03B-00
						303-03C-00
						303-03D-00
						303-04A-00
						303-04B-00
						303-04C-00
						303-04D-00
						303-06-00
						303-07A-00
						303-07B-00
						303-14A-00
						303-14B-00
						303-14C-00
						303-14D-00
						307-01-00
						308-03B-00
						310-03-00
			●			412-02B-00
			●			412-03A-00
						413-00-00
						413-01-00
F71	F72	F76	F77			
*	30	50	300			

F71*: 40A: before 11/2001
30A: as of 11/2001

700-01-00-019, Fuse and Relay Information, Central Junction Box (CJB)

		Fuse number															
		51	52	53	54	55	56	57	58	59	60	61	62	70*	73	74*	75
Group	Description	20A	20A	10A	10A	5A	5A	5A	10A	10A 15A*	10A 15A*	10A	10A	30A	50A	50A	30A
413-06-00	Horn																
413-07-00	Clock																
413-09-00	Warning Devices					●	●	●									
413-13-00	Parking Aid																
414-02-00	Generator and Regulator																
415-01-00	Audio Unit																
415-03-00	Speakers																
415-07-00	Video System																
417-01-00	Exterior Lighting		●				●	●	●	●	●	●	●				
417-02-00	Interior Lighting			●		●											
417-04-00	Daytime Running Lamps						●	●	●	●	●	●	●				
418-00-00	Module Communications Network																
419-01A-00	Anti-Theft - Active				●												
419-01B-00	Anti-Theft - Passive																
419-07-00	Navigation System																
419-08-00	Cellular Phone																
419-10-00	Multifunction Electronic Control Modules					●											
501-09-00	Rear View Mirrors																
501-10-00	Seating																
501-11-00	Glass, Frames and Mechanisms	●													●		●
501-12-00	Instrument Panel and Console																
501-14-00	Handles, Locks, Latches and Entry Systems																●
501-16-00	Wipers and Washers																
501-17-00	Roof Opening Panel																
501-20B-00	Occupant Restraints - Passive																
		51	52	53	54	55	56	57	58	59	60	61	62	70*	73	74*	75
		20A	20A	10A	10A	5A	5A	5A	10A	10A 15A*	10A 15A*	10A	10A	30A	50A	50A	30A

F59*: 15A: as of 05/2001

F60*: 15A: as of 05/2001

F70*: before 05/2001

F74*: as of 05/2001

700-01-00-020, Fuse and Relay Information, Other fuses

Fuse number					
71	72	76	77		
*	30	50	300		Group
					413-06-00
					413-07-00
					413-09-00
					413-13-00
●					414-02-00
	●				415-01-00
					415-03-00
		●			415-07-00
					417-01-00
					417-02-00
					417-04-00
					418-00-00
					419-01A-00
					419-01B-00
					419-07-00
					419-08-00
					419-10-00
					501-09-00
					501-10-00
					501-11-00
					501-12-00
					501-14-00
					501-16-00
					501-17-00
					501-20B-00
71	72	76	77		
*	30	50	300		

F71*: 40A: before 11/2001
30A: as of 11/2001

700-01-00-021, Fuse and Relay Information, Battery Junction Box (BJB)

Group	Description	Fuse number							
		100	101	102	103	104	105	106	107
		30	300	300	600	400	400	1100	1500
206-09A-00	Anti-Lock Control		●	●					
206-09B-00	Anti-Lock Control - Traction Control		●	●					
206-09C-00	Anti-Lock Control - Traction Control and Stability Assist		●	●					
303-03A-00	Engine Cooling - 2.0L DOHC					●	●		
303-03B-00	Engine Cooling - 2.3L DOHC-16V					●	●		
303-03C-00	Engine Cooling - 2.8L CD-V6 24V					●	●		
303-03D-00	Engine Cooling - 1.9L TDI (unit injector engine) Diesel					●	●		
303-04A-00	Fuel Charging and Controls - 2.0L DOHC								
303-04B-00	Fuel Charging and Controls - 2.3L DOHC-16V								
303-04C-00	Fuel Charging and Controls - 2.8L CD-V6 24V								
303-04D-00	Fuel Charging and Controls - 1.9L TDI (unit injector engine) Diesel								
303-06-00	Starting System							●	●
303-07A-00	Engine Ignition								
303-07B-00	Glow Plug System				●				
303-14A-00	Electronic Engine Controls - 2.0L DOHC								
303-14B-00	Electronic Engine Controls - 2.3L DOHC-16V								
303-14C-00	Electronic Engine Controls - 2.8L CD-V6 24V								
303-14D-00	Electronic Engine Controls - 1.9L TDI (unit injector engine) Diesel								
307-01-00	Automatic Transmission								
308-03B-00	Manual Transmission								
310-03-00	Vehicle Speed Control								
412-02B-00	Auxiliary Heating				●				
412-03A-00	Air Conditioning					●	●		
413-00-00	Instrument Cluster and Panel Illumination							●	
413-01-00	Instrument Cluster								
		100	101	102	103	104	105	106	107
		30	300	300	600	400	400	1100	1500

700-01-00-022, Fuse and Relay Information, Battery Junction Box (BJB)

Group	Description	Fuse number							
		100	101	102	103	104	105	106	107
		30	30A	30A	60A	40A	40A	110A	150A
413-06-00	Horn								
413-07-00	Clock							●	
413-09-00	Warning Devices	●						●	
413-13-00	Parking Aid								
414-02-00	Generator and Regulator				●				●
415-01-00	Audio Unit								
415-03-00	Speakers								
415-07-00	Video System								
417-01-00	Exterior Lighting							●	
417-02-00	Interior Lighting								
417-04-00	Daytime Running Lamps							●	
418-00-00	Module Communications Network								
419-01A-00	Anti-Theft - Active								
419-01B-00	Anti-Theft - Passive							●	
419-07-00	Navigation System								
419-08-00	Cellular Phone								
419-10-00	Multifunction Electronic Control Modules	●						●	
501-09-00	Rear View Mirrors								
501-10-00	Seating								
501-11-00	Glass, Frames and Mechanisms								
501-12-00	Instrument Panel and Console								
501-14-00	Handles, Locks, Latches and Entry Systems								
501-16-00	Wipers and Washers							●	
501-17-00	Roof Opening Panel								
501-20B-00	Occupant Restraints - Passive								
		100	101	102	103	104	105	106	107
		30	30A	30A	60A	40A	40A	110A	150A