




700-01-00-001, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), before 05/2001

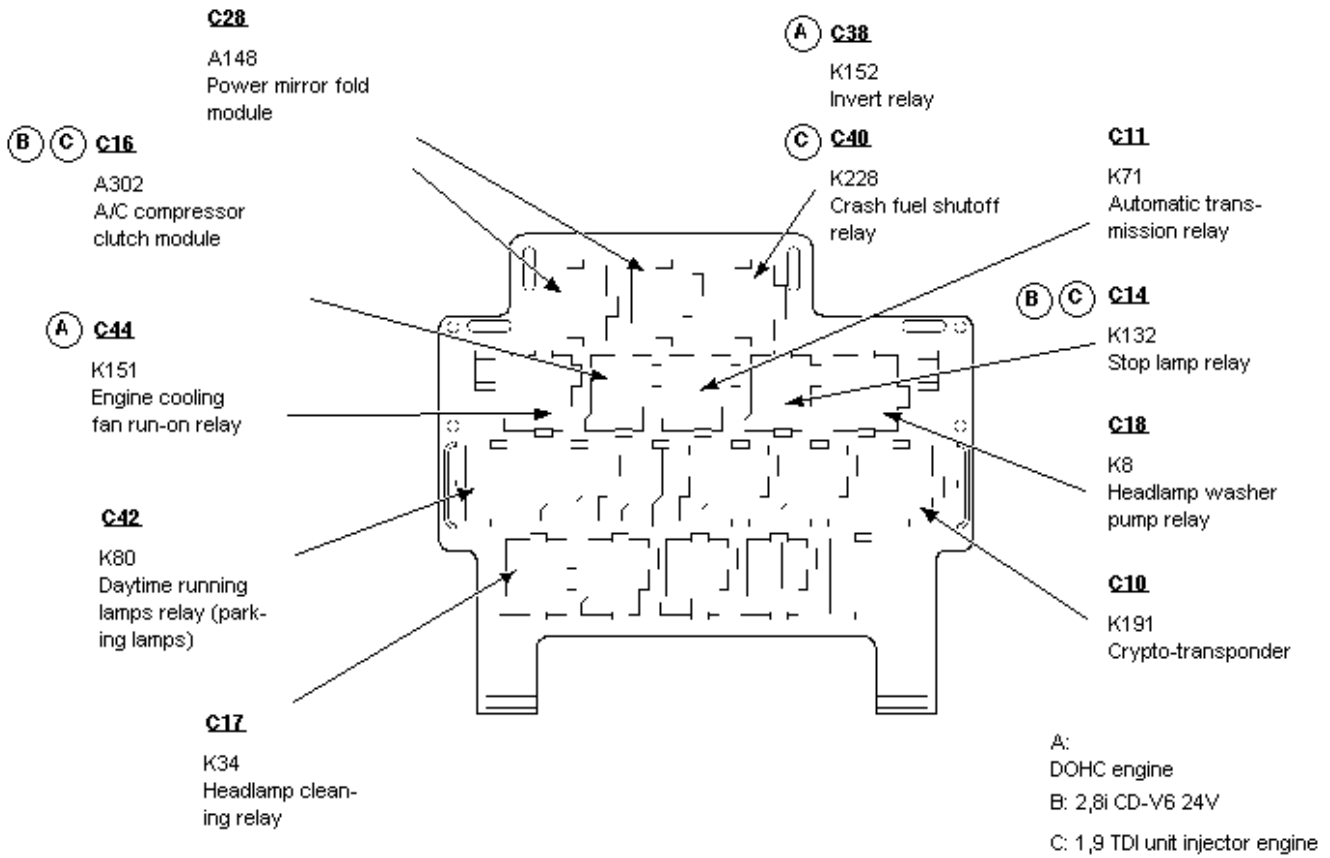


700-01-00-002, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), before 05/2001

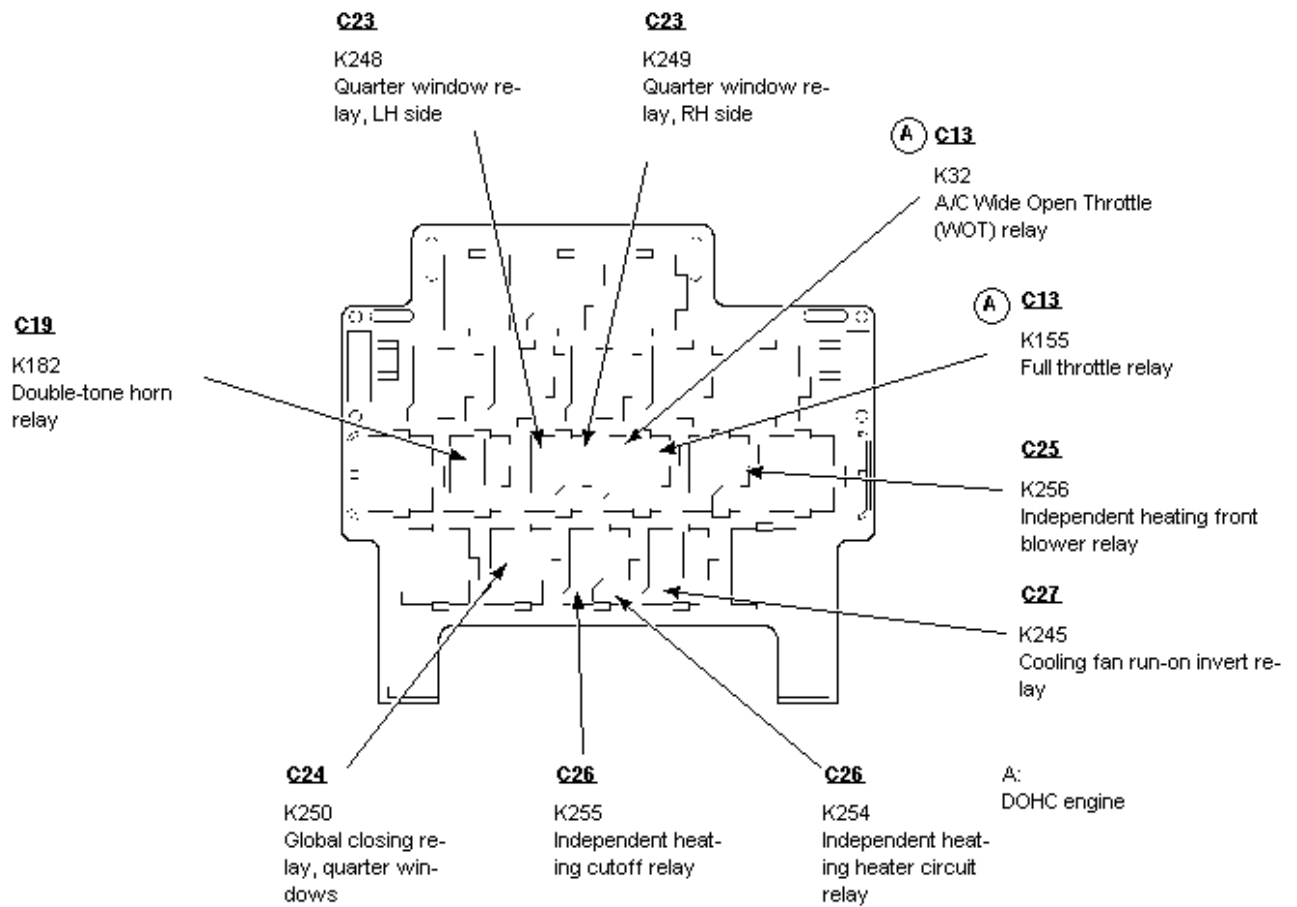


700-01-00-003, Fuse and Relay Information, Bottom relay panel of Central Junction Box (CJB), RHD shown, LHD similar, before 05/2001

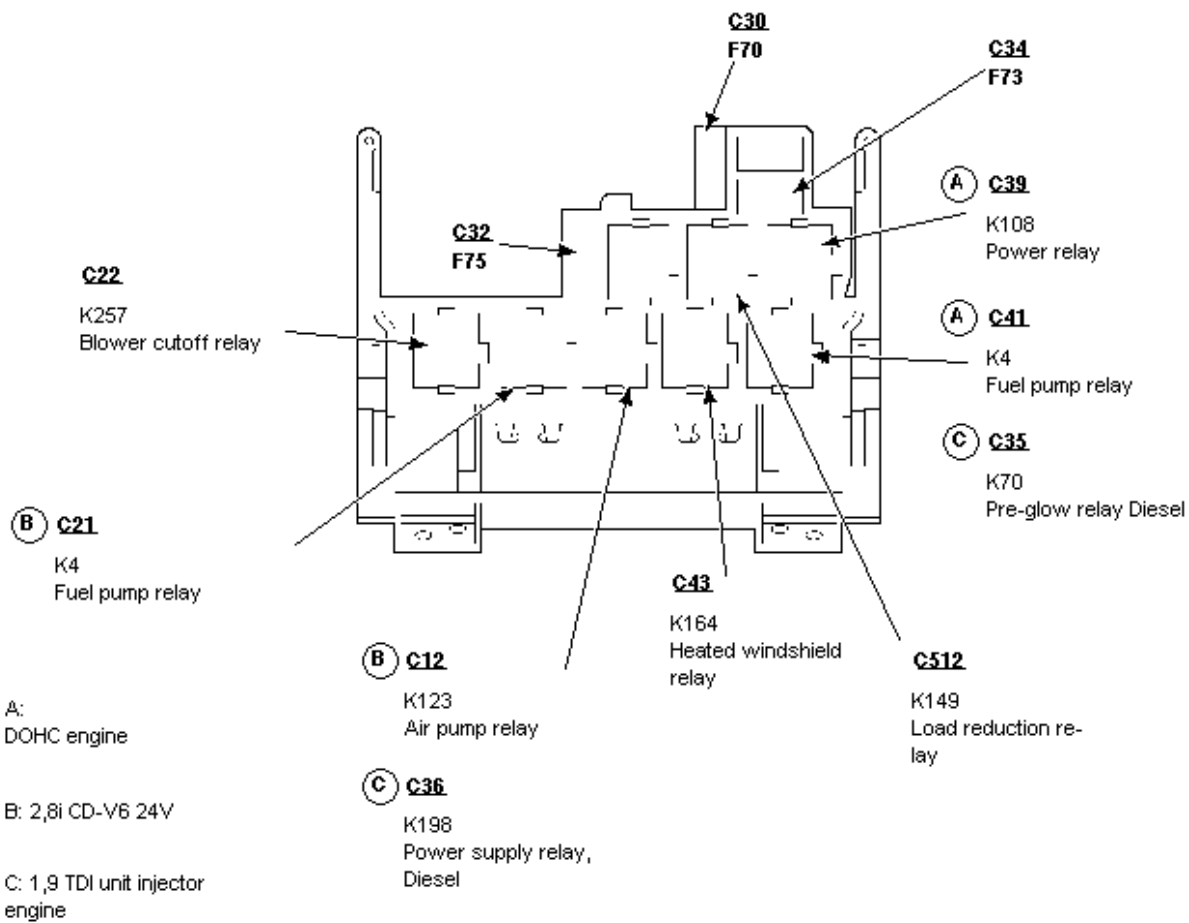


700-01-00-004, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), from 05/2001 to 11/2001

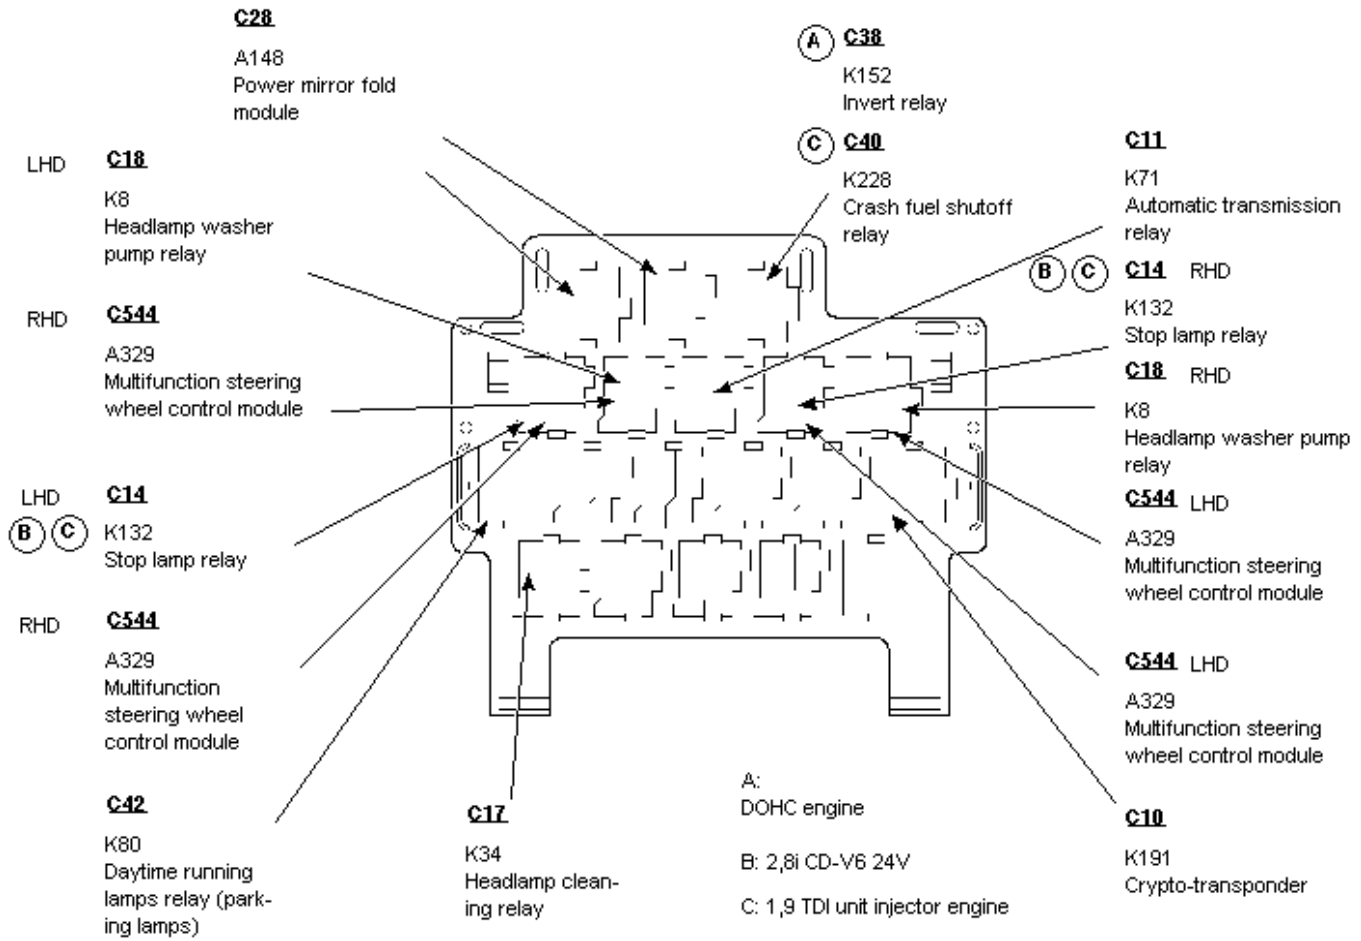


700-01-00-005, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), from 05/2001 to 11/2001

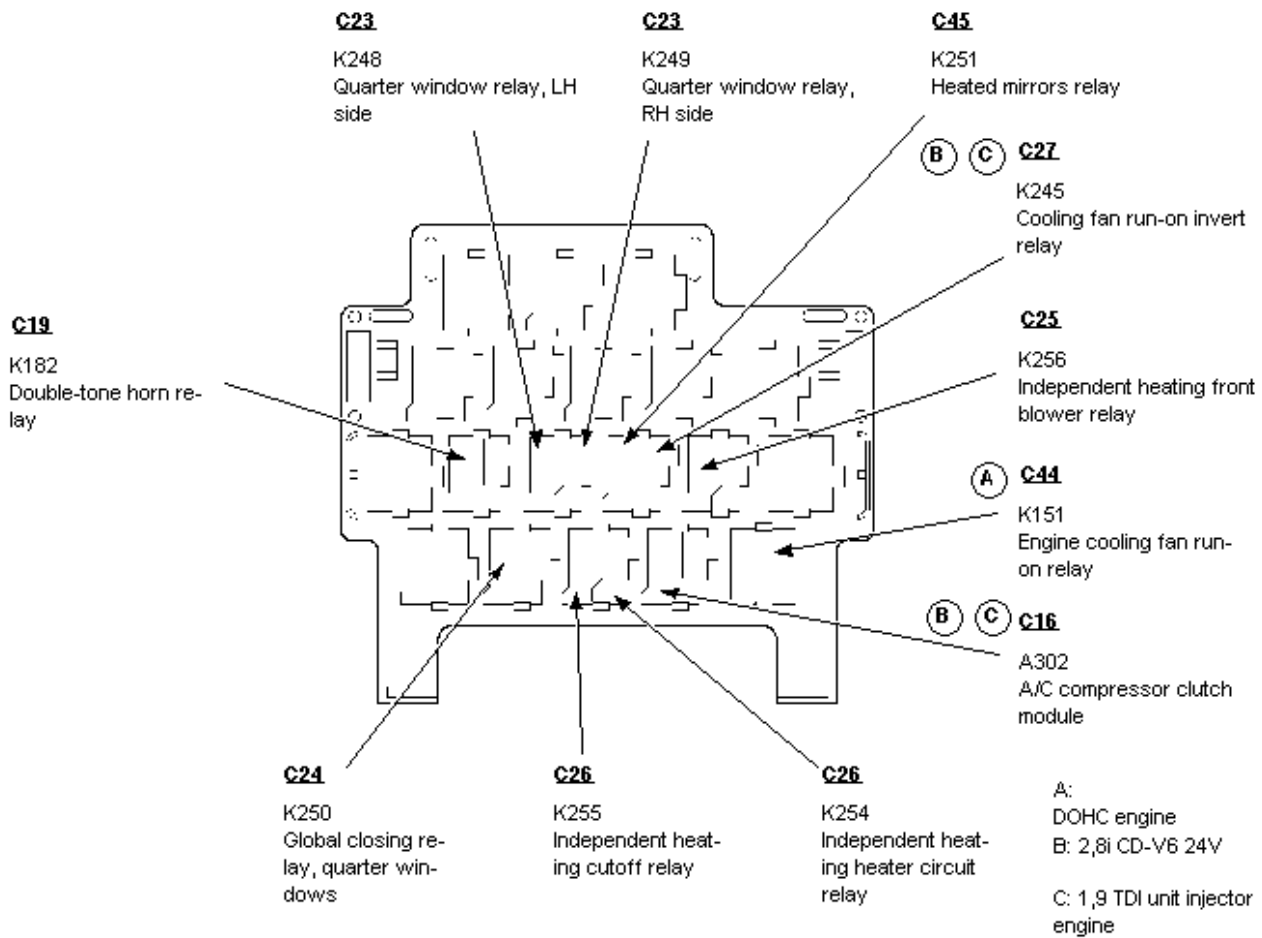


700-01-00-006, Fuse and Relay Information, Bottom relay panel of Central Junction Box (CJB), RHD shown, LHD similar, from 05/2001 to 11/2001

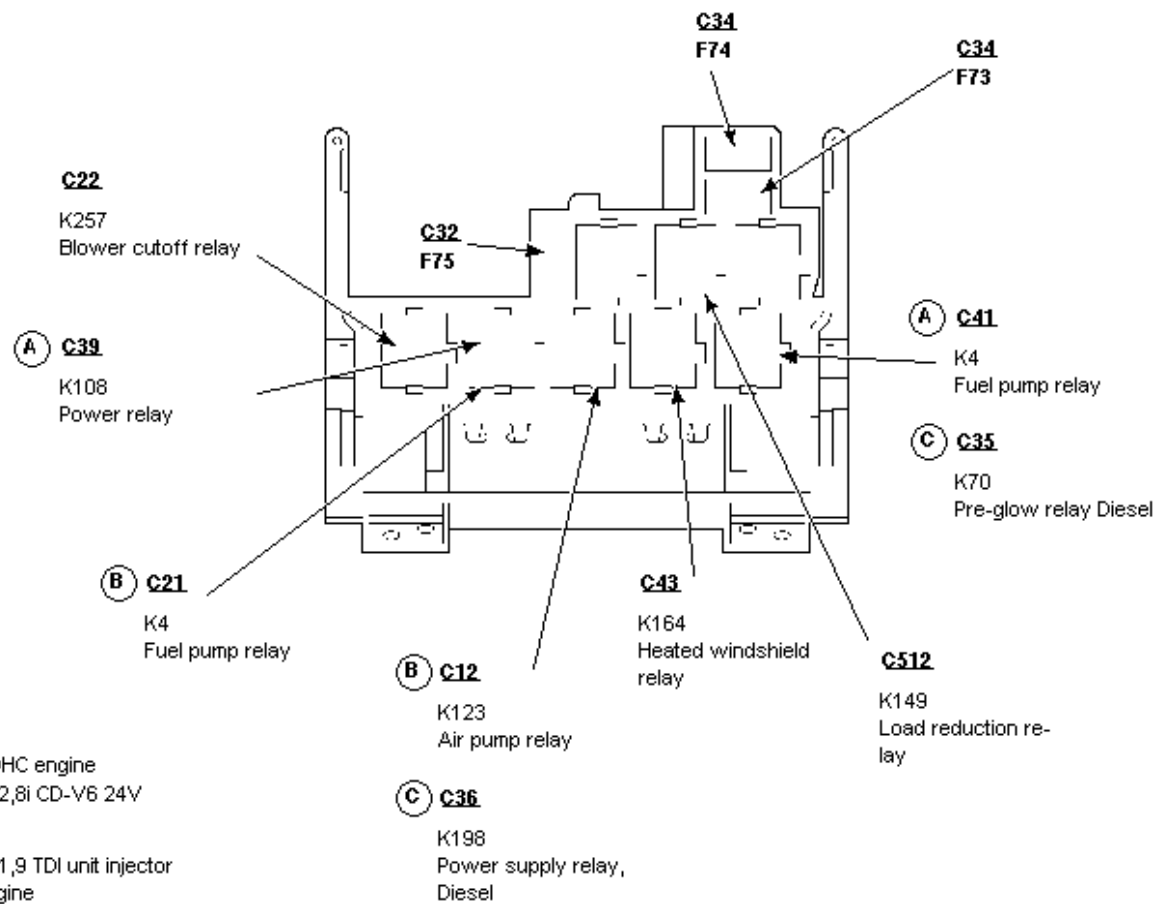


700-01-00-007, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), as of 11/2001

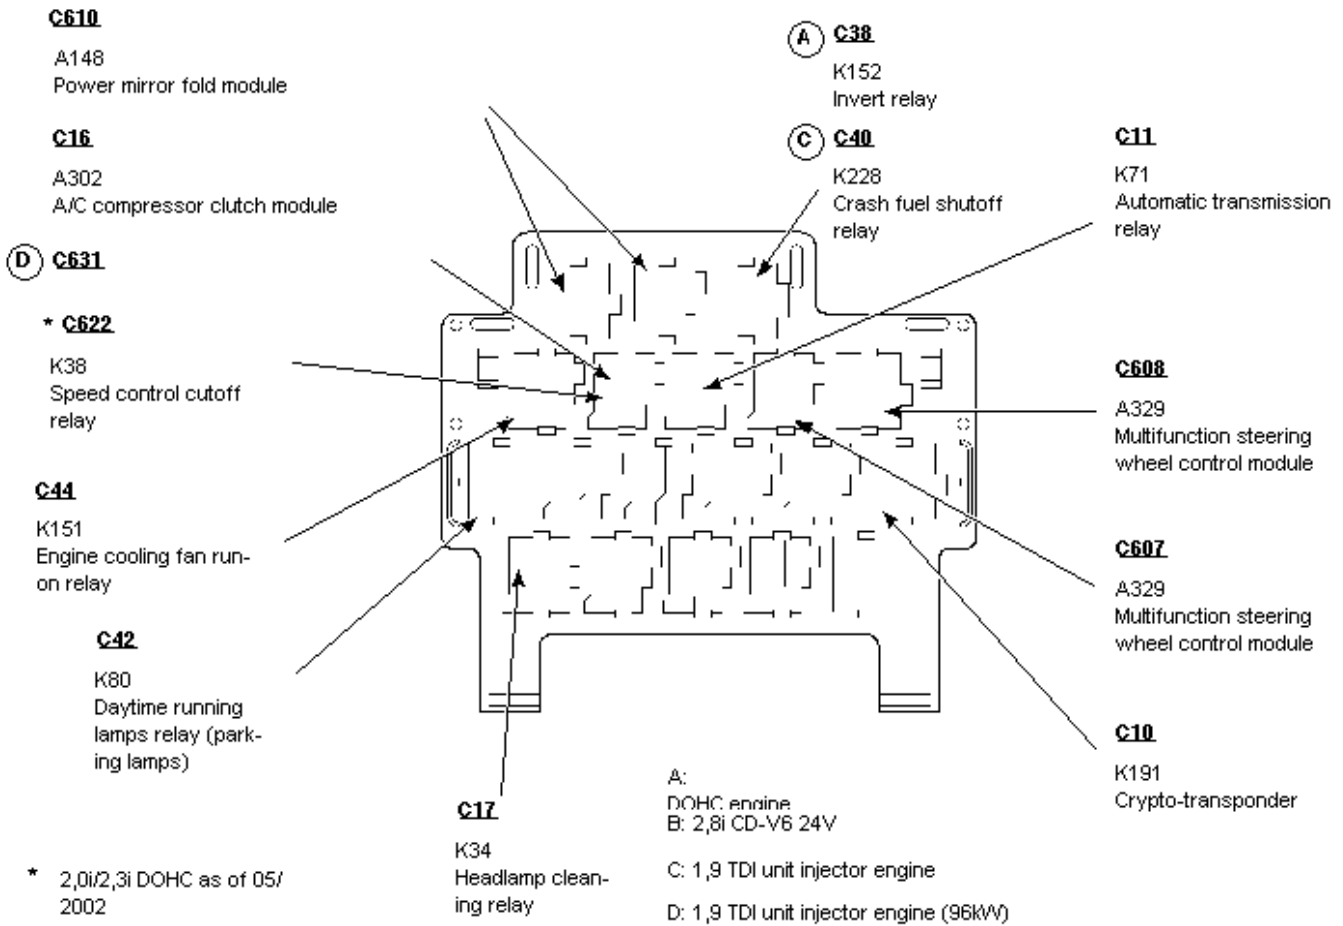

700-01-00-008, Fuse and Relay Information, Top relay panel of Central Junction Box (CJB), as of 11/2001

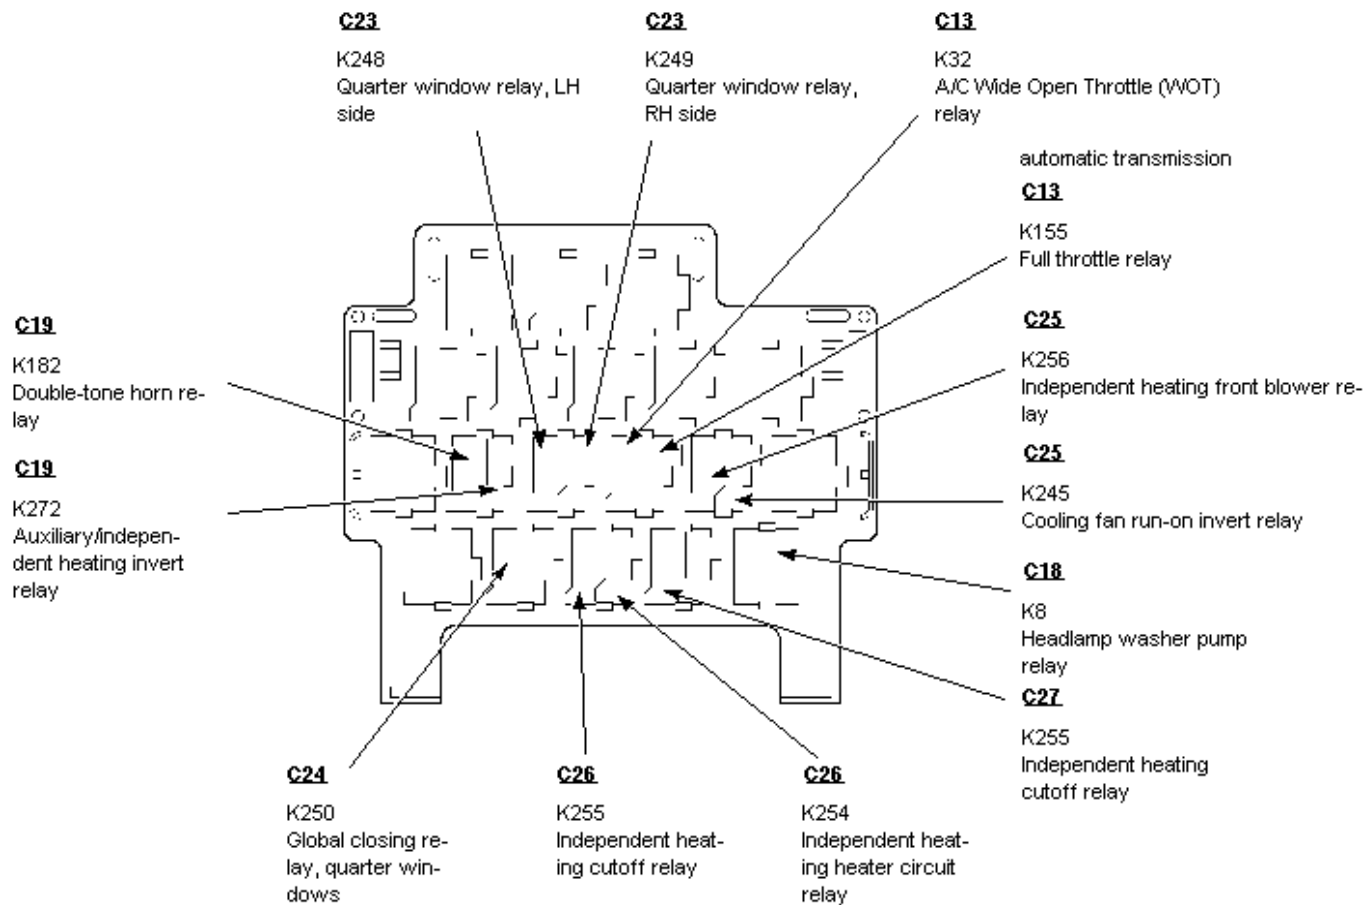


700-01-00-009, Fuse and Relay Information, Bottom relay panel of Central Junction Box (CJB), RHD shown, LHD similar, as of 11/2001

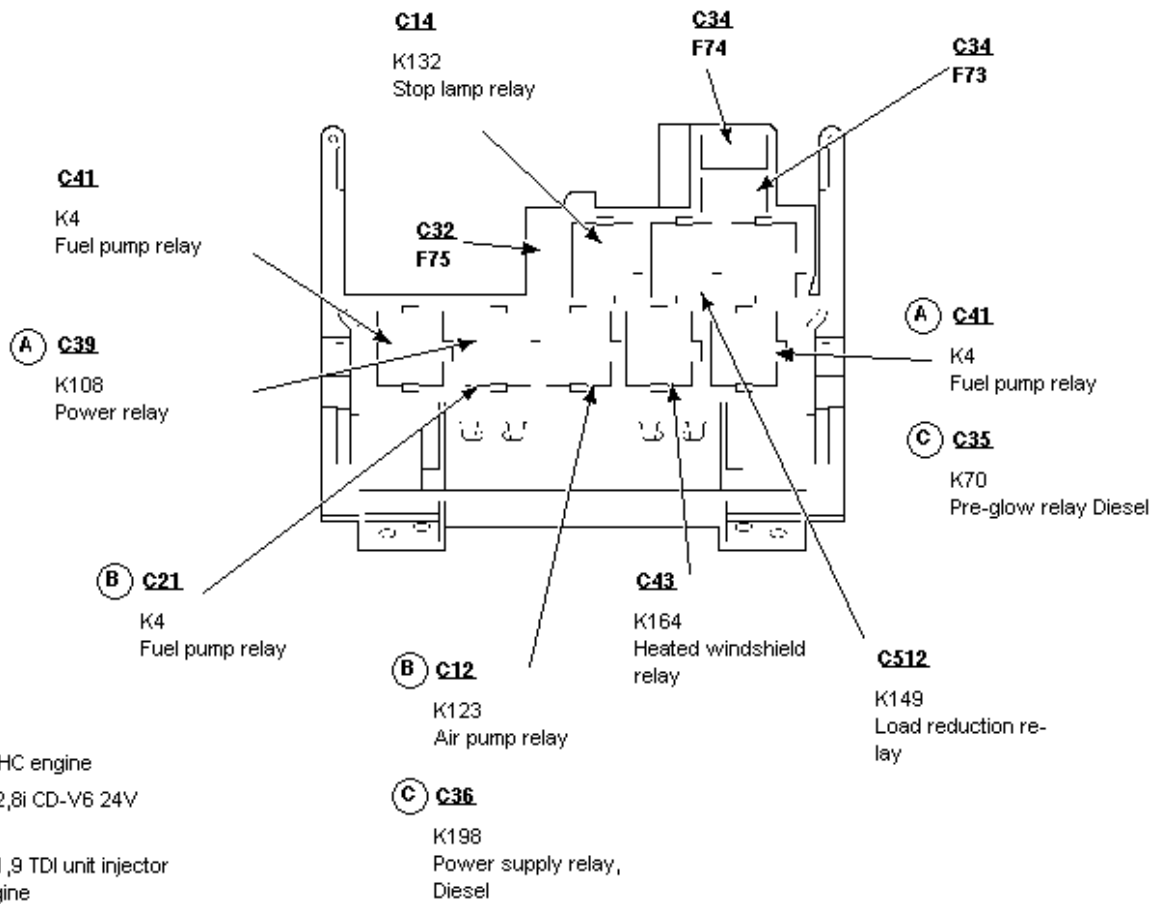


700-01-00-010, Fuse and Relay Information, under RH front seat

C33
F71
P44
Fuse holder


C15
K196
Auxiliary battery/in-
dependent heating
cut-out relay

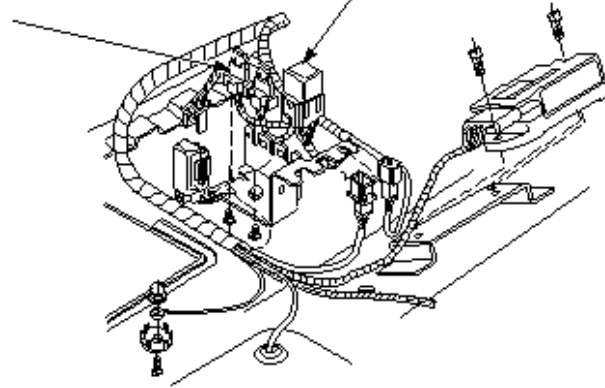

700-01-00-011, Fuse and Relay Information, Fuse panel below Central Junction Box (CJB)

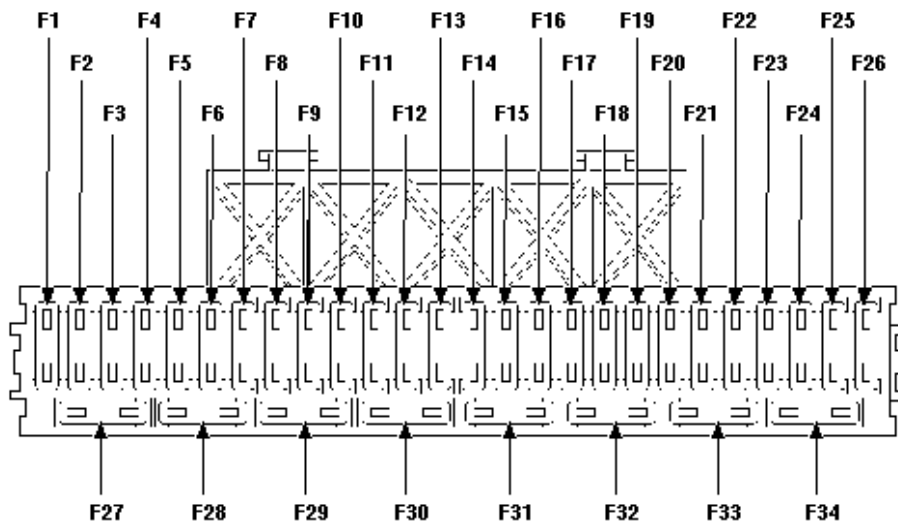

700-01-00-012, Fuse and Relay Information, Fuse panel of Central Junction Box (CJB)

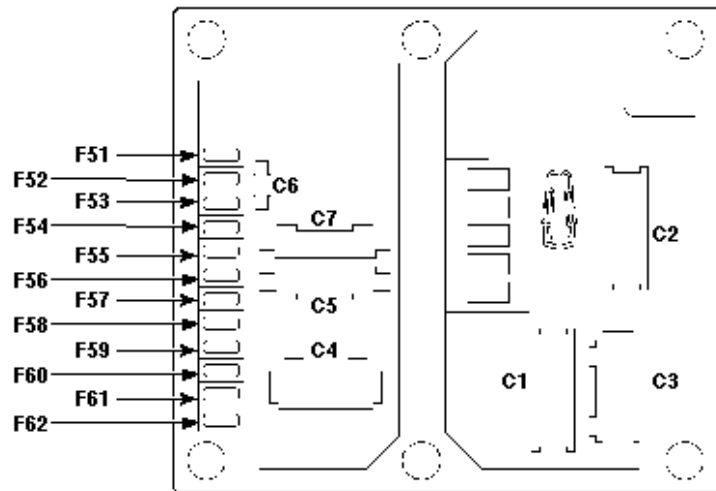

700-01-00-013, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number														
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
		10A	10A	5A	10A	15A	*	25A	15A	5A 15A*	*	20A 25A*	25A	30 100*	20A 25A*	10A
206-09A-00	Anti-Lock Control			●												●
206-09B-00	Anti-Lock Control - Traction Control			●												●
206-09C-00	Anti-Lock Control - Traction Control and Stability Assist		●	●												●
303-03A-00	Engine Cooling - 2.0I DOHC															●
303-03B-00	Engine Cooling - 2.3I DOHC															●
303-03C-00	Engine Cooling - 2.8I CD-V6 24V		●													
303-03D-00	Engine Cooling - 1.9 TDI Multijet engine		●	●												
303-04A-00	Fuel Charging and Controls - 2.0I DOHC															●
303-04B-00	Fuel Charging and Controls - 2.3I DOHC															●
303-04C-00	Fuel Charging and Controls - 2.8I CD-V6 24V															●
303-04D-00	Fuel Charging and Controls - 1.9 TDI Multijet engine													●	●	
303-06-00	Starting System															
303-07A-00	Engine Ignition	●														
303-07B-00	Glow Plug System															
303-14A-00	Electronic Engine Controls - 2.0I DOHC														●	●
303-14B-00	Electronic Engine Controls - 2.3I DOHC														●	●
303-14C-00	Electronic Engine Controls - 2.8I CD-V6 24V	●			●										●	●
303-14D-00	Electronic Engine Controls - 1.9 TDI Multijet engine	●			●										●	●
307-01-00	Automatic Transmission					●										●
308-03B-00	Manual Transmission					●										●
310-05-00	Vehicle Speed Control		●	●												●
412-02B-00	Auxiliary Heating			●					●				●			
412-05A-00	Air Conditioning		●	●												●
413-00-00	Instrument Cluster and Panel Illumination															
413-01-00	Instrument Cluster	●														
F6*: 10A: before 11/2001 25A: as of 11/2001		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
F9*: 15A: with heated seats		10A	10A	5A	10A	15A	*	25A	15A	5A 15A*	*	20A 25A*	25A	30 100*	20A 25A*	10A
F10*: 15A: before 05/2002 10A: as of 05/2002																
F11*: 25A: with trailer socket																
F13*: 10A: 1.9 TDI Multijet engine																
F14*: 30A: 2.8I CD-V6 24V 25A: 1.9 TDI Multijet engine																

700-01-00-014, Fuse and Relay Information, Central Junction Box (CJB)

Fuse number														Group					
16	17	18	19	20	21	22	23	24	25	26	27	28	29		30	31	32	33	34
15A	10A	5A	5A	10A 15A*	25A	30A	10A	30A	30A	15A	25A	3A	*	20A	3A	5A	*	5A 10A*	
																			206-09A-00
																			206-09B-00
																	●		206-09C-00
		●																●	303-03A-00
		●																●	303-03B-00
●		●		●															303-03C-00
●		●		●										●				●	303-03D-00
																		●	303-04A-00
																		●	303-04B-00
										●								●	303-04C-00
																		●	303-04D-00
										●									303-06-00
															●				303-07A-00
																		●	303-07B-00
																		●	303-14A-00
																		●	303-14B-00
										●								●	303-14C-00
			●															●	303-14D-00
	●								●										307-01-00
																			308-03B-00
																	●	●	310-03-00
			●								●						●	●	412-02B-00
●		●	●	●	●	●								●			●	●	412-03A-00
													●						413-00-00
											●					●	●	●	413-01-00
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	
15A	10A	5A	5A	10A 15A*	25A	30A	10A	30A	30A	15A	25A	3A	*	20A	3A	5A	*	5A 10A*	

F20*: 5A: as of 05/2001

F33*: 30A: before 11/2001

F29*: 10A: 1.9 TDI with Injektorenglie (96kW)

10A: as of 11/2001

20A: Other

F34*: 10A: 1.9 TDI with Injektorenglie

700-01-00-015, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number															
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
		10A	10A	5A	10A	15A	*	25A	15A	5A 15A ^{F6*}	*	20A 25A ^{F6*}	25A	5A 10A ^{F6*}	20A 25A ^{F6*}	30A ^{F6*}	10A
413-06-00	Horn			●			●										
413-07-00	Clock																
413-09-00	Warning Devices																
413-13-00	Parking Aid		●			●											
414-02-00	Generator and Regulator							●									
415-01-00	Audio Unit		●														
415-03-00	Speakers																
415-07-00	Video System										●						
417-01-00	Exterior Lighting		●			●			●			●					●
417-02-00	Interior Lighting																
417-04-00	Daytime Running Lamps																
418-00-00	Mobile Communications Network																
419-01A-00	Anti-Theft- Active			●													
419-01B-00	Anti-Theft- Passive				●												
419-07-00	Navigation System			●		●											
419-08-00	Cellular Phone																
419-10-00	Multifunction Electronic Control Modules			●													
501-09-00	Rear View Mirrors		●	●		●											
501-10-00	Seating			●					●								
501-11-00	Glass, Frames and Mechanisms		●														
501-12-00	Instrument Panel and Console							●	●		●						
501-14-00	Handles, Locks, Latches and Entry Systems																
501-16-00	Wipers and Washers											●					
501-17-00	Roof Opening Panel			●													
501-20B-00	Occupant Restraints - Passive																

F6*: 10A: before 11/2001
 25A: as of 11/2001
 F9*: 15A: with heated seats
 F10*: 15A: before 05/2002
 10A: as of 05/2002
 F11*: 25A: with trailer socket

F13*: 10A: 1.9 TDI multijector engine
 F14*: 30A: 2.8i CD-i v6 24V
 25A: 1.9 TDI multijector engine

700-01-00-016, Fuse and Relay Information, Central Junction Box (CJB)

Fuse number																Group			
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31		32	33	34
15A	10A	5A	5A	10A 15A*	25A	30A	10A	30A	30A	15A	25A	3A	*	20A	3A	5A	*	5A 10A*	
																			413-06-00
												●					●		413-07-00
											●					●	●		413-09-00
																			413-13-00
			●															●	414-02-00
															●	●	●		415-01-00
																			415-03-00
															●	●	●		415-07-00
			●																417-01-00
											●								417-02-00
			●																417-04-00
																	●		418-00-00
												●				●	●		419-01A-00
										●							●		419-01B-00
															●	●	●		419-07-00
																●	●		419-08-00
												●				●			419-10-00
																			501-09-00
																			501-10-00
			●				●				●						●		501-11-00
																			501-12-00
												●					●		501-14-00
				●				●			●						●	●	501-16-00
											●								501-17-00
											●								501-20B-00

F20*: 15A: as of 05/2001

F33*: 30A: before 11/2001

F29*: 10A: 1.9 TDI with Injece engine (9600)

10A: as of 11/2001

20A: Other

F34*: 10A: 1.9 TDI with Injece engine

700-01-00-017, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number															
		51	52	53	54	55	56	57	58	59	60	61	62	70*	73	74*	75
		20A	20A	10A	10A	5A	5A	5A	10A	10A 15A*	10A 15A*	10A	10A	30A	50A	50A	30A
206-09A-00	Anti-Lock Control																
206-09B-00	Anti-Lock Control - Traction Control																
206-09C-00	Anti-Lock Control - Traction Control and Stability Assist																
303-03A-00	Engine Cooling - 2.0I DOHC																
303-03B-00	Engine Cooling - 2.3I DOHC																
303-03C-00	Engine Cooling - 2.8I CD-V6 24V																
303-03D-00	Engine Cooling - 1.9 TDI multijector engine																
303-04A-00	Fuel Charging and Controls - 2.0I DOHC																
303-04B-00	Fuel Charging and Controls - 2.3I DOHC																
303-04C-00	Fuel Charging and Controls - 2.8I CD-V6 24V																
303-04D-00	Fuel Charging and Controls - 1.9 TDI multijector engine																
303-06-00	Starting System																
303-07A-00	Engine Ignition																
303-07B-00	Glow Plug System																
303-14A-00	Electronic Engine Controls - 2.0I DOHC																
303-14B-00	Electronic Engine Controls - 2.3I DOHC																
303-14C-00	Electronic Engine Controls - 2.8I CD-V6 24V													●		●	
303-14D-00	Electronic Engine Controls - 1.9 TDI multijector engine																
307-01-00	Automatic Transmission																
308-05B-00	Manual Transmission																
310-03-00	Vehicle Speed Control																
412-02B-00	Auxiliary Heating																
412-03A-00	Air Conditioning																
413-00-00	Instrument Cluster and Panel Illumination																
413-01-00	Instrument Cluster											●					

F59*: 15A: as of 05/2001

F60*: 15A: as of 05/2001

F70*: before 05/2001

F74*: as of 05/2001

700-01-00-018, Fuse and Relay Information, Other fuses

Fuse number					Group
71	72	76	77		
*	3A	5A	30A		
					206-09A-00
					206-09B-00
					206-09C-00
					303-03A-00
					303-03B-00
					303-03C-00
					303-03D-00
					303-04A-00
					303-04B-00
					303-04C-00
					303-04D-00
					303-06-00
					303-07A-00
					303-07B-00
					303-14A-00
					303-14B-00
					303-14C-00
					303-14D-00
					307-01-00
					308-03B-00
					310-03-00
			●		412-02B-00
			●		412-03A-00
					413-00-00
					413-01-00
71	72	76	77		
*	3A	5A	30A		

F71*: 40A: before 11/2001
30A: as of 11/2001

700-01-00-019, Fuse and Relay Information, Central Junction Box (CJB)

Group	Description	Fuse number															
		51	52	53	54	55	56	57	58	59	60	61	62	70*	73	74*	75
		200	200	100	100	50	50	50	100	100	100	100	100	300	500	500	300
413-06-00	Horn																
413-07-00	Clock																
413-09-00	Warning Devices					●	●	●									
413-13-00	Parking Aid																
414-02-00	Generator and Regulator																
415-01-00	Audio Unit																
415-03-00	Speakers																
415-07-00	Video System																
417-01-00	Exterior Lighting		●				●	●	●	●	●	●	●				
417-02-00	Interior Lighting			●		●											
417-04-00	Daytime Running Lamps						●	●	●	●	●	●					
418-00-00	Mobile Communications Network																
419-01A-00	Anti-Theft - Active				●												
419-01B-00	Anti-Theft - Passive																
419-07-00	Navigation System																
419-08-00	Cellular Phone																
419-10-00	Multifunction Electronic Control Modules					●											
501-09-00	Rear View Mirrors																
501-10-00	Seating																
501-11-00	Glass, Frames and Mechanisms	●													●		●
501-12-00	Instrument Panel and Console																
501-14-00	Handles, Locks, Latches and Entry Systems																●
501-16-00	Wipers and Washers																
501-17-00	Roof Opening Panel																
501-20B-00	Occupant Restraints - Passive																
		51	52	53	54	55	56	57	58	59	60	61	62	70*	73	74*	75
		200	200	100	100	50	50	50	100	100	100	100	100	300	500	500	300

F59*: 15A: as of 05/2001

F60*: 15A: as of 05/2001

F70*: before 05/2001

F74*: as of 05/2001

700-01-00-020, Fuse and Relay Information, Other fuses

Fuse number					Group
71	72	76	77		
*	3A	5A	30A		
					413-06-00
					413-07-00
					413-09-00
					413-13-00
●					414-02-00
	●				415-01-00
					415-03-00
		●			415-07-00
					417-01-00
					417-02-00
					417-04-00
					418-00-00
					419-01A-00
					419-01B-00
					419-07-00
					419-08-00
					419-10-00
					501-09-00
					501-10-00
					501-11-00
					501-12-00
					501-14-00
					501-16-00
					501-17-00
					501-20B-00
71	72	76	77		
*	3A	5A	30A		

F71*: 40A: before 11/2001
 30A: as of 11/2001

700-01-00-021, Fuse and Relay Information, Battery Junction Box (BJB)

Group	Description	Fuse number							
		100	101	102	103	104	105	106	107
		30	300	300	600	400	400	1100	1500
206-09A-00	Anti-Lock Control		●	●					
206-09B-00	Anti-Lock Control - Traction Control		●	●					
206-09C-00	Anti-Lock Control - Traction Control and Stability Assist		●	●					
303-03A-00	Engine Cooling - 2.0I DOHC					●	●		
303-03B-00	Engine Cooling - 2.3I DOHC					●	●		
303-03C-00	Engine Cooling - 2.8I CD-V6 24V					●	●		
303-03D-00	Engine Cooling - 1.9 TDI Multijet engine					●	●		
303-04A-00	Fuel Charging and Controls - 2.0I DOHC								
303-04B-00	Fuel Charging and Controls - 2.3I DOHC								
303-04C-00	Fuel Charging and Controls - 2.8I CD-V6 24V								
303-04D-00	Fuel Charging and Controls - 1.9 TDI Multijet engine								
303-06-00	Starting System							●	●
303-07A-00	Engine Ignition								
303-07B-00	Glow Plug System				●				
303-14A-00	Electronic Engine Controls - 2.0I DOHC								
303-14B-00	Electronic Engine Controls - 2.3I DOHC								
303-14C-00	Electronic Engine Controls - 2.8I CD-V6 24V								
303-14D-00	Electronic Engine Controls - 1.9 TDI Multijet engine								
307-01-00	Automatic Transmission								
308-03B-00	Manual Transmission								
310-03-00	Vehicle Speed Control								
412-02B-00	Auxiliary Heating				●				
412-03A-00	Air Conditioning					●	●		
413-00-00	Instrument Cluster and Panel Illumination							●	
413-01-00	Instrument Cluster								

700-01-00-022, Fuse and Relay Information, Battery Junction Box (BJB)

Group	Description	Fuse number							
		100	101	102	103	104	105	106	107
		20	300	300	600	400	400	1100	1500
413-06-00	Horn								
413-07-00	Clock						●		
413-09-00	Warning Devices	●					●		
413-13-00	Parking Aid								
414-02-00	Generator and Regulator				●			●	
415-01-00	Audio Unit								
415-03-00	Speakers								
415-07-00	Video System								
417-01-00	Exterior Lighting						●		
417-02-00	Interior Lighting								
417-04-00	Daytime Running Lamps						●		
418-00-00	Mobile Communications Network								
419-01A-00	Anti-Theft - Active								
419-01B-00	Anti-Theft - Passive						●		
419-07-00	Navigation System								
419-08-00	Cellular Phone								
419-10-00	Multifunction Electronic Control Modules	●					●		
501-09-00	Rear View Mirrors								
501-10-00	Seating								
501-11-00	Glass, Frames and Mechanisms								
501-12-00	Instrument Panel and Console								
501-14-00	Handles, Locks, Latches and Entry Systems								
501-16-00	Wipers and Washers						●		
501-17-00	Roof Opening Panel								
501-20B-00	Occupant Restraints - Passive								